
Quick reference guide

TCLFLIP_{Pro}

Para la versión en español, visite verizonwireless.com/support


About your phone

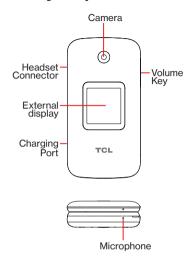

NOTE: Not all features, apps or services may be available with your plan, device operating system and software version.

Please contact your wireless service provider for more information.

Devices and software are constantly evolving, the screen images and icon you see here are for reference only.

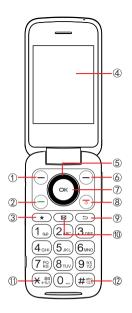

Left Soft Key

· Press: to access Notifications

2 Call Key

- · Press: Make a call
- · Press: Enter call log (from Idle screen)

3 Favorite Contacts

· Press: Access Favorite Contacts

④ Internal display

- ⑤ Navigation Key (up, down, left, right)
 - Menu selection moves up, down, right, and left
 - · Press Left: Access Applications
 - · Press Up: Access Commonly Used Settings
 - · Press Right: Access Camera / Video
 - · Press Down: Cloud

6 Right Soft Key

· Press: Access Contacts

⑦ Center Soft Key

- · Press: Confirm an option
- · Press: Access app list (from Home screen)

8 End/Power Key

- · Press: End a call, return to the Idle screen
- · Press and hold: to Restart and Power on/off

Back/Delete Key

- · Move backwards through Menus
- · Delete entered number or letters

Messages

· Press: Access Messages

Letters symbols

 Press (★.♥) then choose a symbol. Press the Center Soft Key (∞) to insert in message or email

① Text input

 Repeat press of ### to change text input method from ABC to Abc, 123 or Predictive text

Setting up your phone

Your phone already has a NANO SIM card installed.

MicroSD[™] cards (up to 32GB) may be purchased separately.

NOTE: Power off the device before opening the back cover to install a microSD or replace the NANO SIM card.



Step 1. With the device facing down, remove the back cover from the bottom left corner. Use your fingernail to carefully lift the cover away from the device body.

Step 2. Remove the battery using your fingernail to lift from the top left corner.

Step 3. To insert SIM card or microSD card, push the SIM card or microSD card into the card slot with the gold-colored contacts facing down



To remove the SIM card or microSD card, press down on the small plastic tab (0), then slide out the card (2). Do not use force or any sharp objects.

Step 4. Re-install the battery by aligning the gold contact points of the battery with the gold contact points of the device. It only fits one way. Press down to snap in place.

Step 5. Carefully align the back cover with tabs and press into place. It only fits one direction.

Step 6. Charge your phone fully before turning it on and starting the set up process. Insert the small end of the charging cable into the charger port on the phone. Insert the other end of the cable into your wall charger and plug it into a wall outlet.



WARNING: Only use the charger and cable supplied with the phone. Using incompatible chargers or tampering with the charging port could damage your phone and void the warranty.

Using your phone

Turn your phone on/off

NOTE: The first time you turn on your phone, you may need to activate it. Follow the on screen instructions to set up your phone.

Locking/Unlocking your screen

To keep your phone contents secure and protect your privacy, you can lock the phone screen by creating a password.

- From the Home screen, press the Center Soft Key , select Settings , and then press the Navigation Key to select Privacy & Security > Screen lock.
- Press the Center Soft Key (a) and select
 On to enable screen lock in the Screen lock screen.
- 3. Enter the passcode twice and press the **Right Soft Key** (a) to create.

Home screen

From the Home Screen:

- Press the Center Soft Key (x) to access phone settings.
- Press the Left Navigation Key (see page 2 & 3) to access applications. Scroll up and down using the Navigation Key to select an app, then press Center Soft Key (a) to open.
- Use the KaiStore to download additional free apps such as Maps or Games.



Making a call

- Dial the desired number or select from the contact list or favorites (see page 2), then press the Call Key

 to place the call.
- If you make a mistake, press the Back/ Delete Key to delete the incorrect digits.
- Press the Right Soft Key to display more
 Options. Then press up or down on the
 Navigation key to select which option you
 would like to complete.

Receiving a call

When you receive a call:

- Press the Left Soft Key or the Call Key
 to answer;
- If the device is closed, you will get a preview of an incoming call on the external screen.
 You can accept the call by flipping the device open and you can begin talking immediately.
- Press the the Right Soft Key
 or the End/
 Power Key
 to reject;
- To mute the ringtone volume of an incoming call, press the **Volume Up/Down Key**.

Setting up voice mail

- Dial *86 and press the Call Key

 or the Center Soft Key
- 2. When you hear a greeting, press ## to interrupt.
- 3. Follow the setup instructions.

Checking voice mail

From your phone:

- 2. Follow the instructions.

From other phones:

- 1. Dial your wireless number.
- When you hear the greeting, press ##125 to interrupt.
- 3. Follow the instructions.

NOTE: Voice mailboxes not set up within 45 days will be canceled. Your voice mailbox is not password protected until you create a password by following the setup tutorial. Voice mail may not be available in some areas. Follow the setup instructions to password protect your Verizon voice mailbox. Verizon is not responsible for missed messages or deletions of messages from your voice mailbox, even if you have saved them.

Learning more



Visit verizonwireless.com/support for more information.



Customer service Call 800.922.0204 Twitter @VZWSupport



Download a User Guide from verizonwireless.com/support.

Spanish User Guide can also be found from www.verizonwireless.com/support.

Managing your account



My Verizon Mobile app

Manage your account, track your usage, edit account information, pay your bill and more.



Customer service
Call 800.922.0204

Twitter @VZWSupport

Additional information

Your wireless device and thirdparty services

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this device are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this device or any non-Verizon Wireless applications, services and products, including any personal information you choose to use, submit or share with others. Specific third-party terms and conditions, terms of use and privacy policies apply. Please review carefully all applicable terms, conditions and policies prior to using this wireless device and any associated application, product or service.

Hearing aid compatibility information

This device has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer technologies that have not been tested yet for use with hearing aids. It is important to try the different features of this device thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Ask your service provider or the manufacturer of this device for information on hearing aid compatibility. If you have questions about return or exchange policies, ask your service provider or device retailer.

English - CJB67X001AAA Printed in China

© 2021 Verizon Wireless.

© 2021 TCT Mobile Inc. All rights reserved.

