


2.1 Channel Home Theater Sound Bar





Quick start guide

1. What's in the box

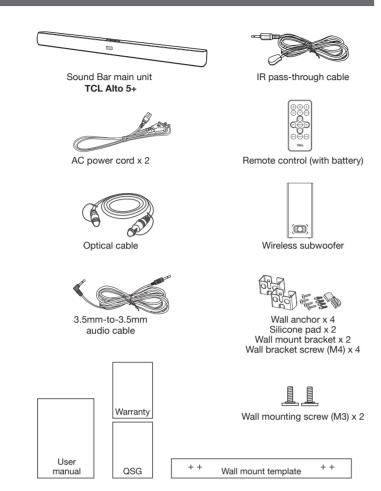


2a Overview

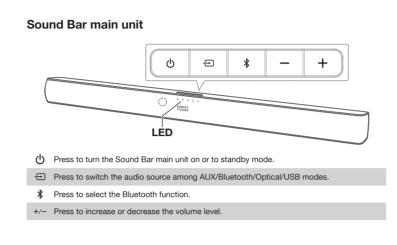


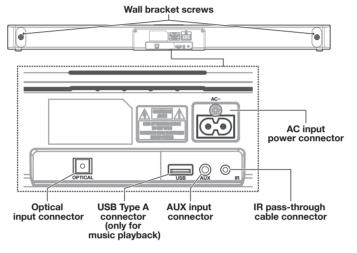


2b Overview

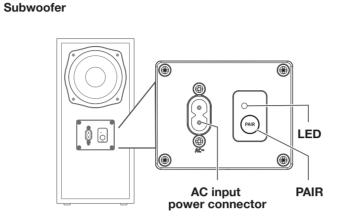

Remote control

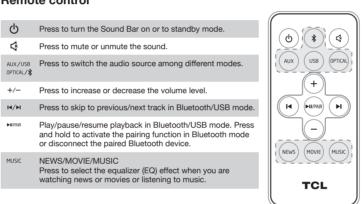

3. Wall mount

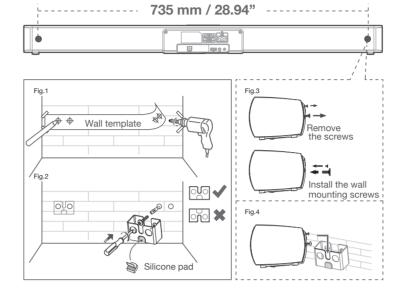

- Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches (5cm) below the center of the TV.
- 2. Use a level to make sure the Sound Bar is positioned accurately.
- 3. Use the tape to stick the wall mount template firmly on the wall.
- 4. Mark on the wall using each marking on the template through the mounting holes (Fig.1).
- 5. Take away the wall mount template. 6. Drill a screw hole at each marking on the wall (Fig.1).
- 7. Insert the supplied wall anchors into 4 screw holes on the wall (Fig. 2).
- Insert the supplied wall bracket screws into the wall anchors. Leave 4mm between the screw heads and the wall (Fig. 2).
- Fix and tighten the wall bracket screws on the wall. Stick the silicone pads on the wall mount brackets when necessary to adjust the direction of the Sound Bar main unit (Fig. 2). 10. Replace the screws at the back of the Sound Bar main unit with the supplied wall mounting
- 11. Hang the Sound Bar main unit on the screws.

DO NOT RETURN TO STORE



TCL SUPPORT: www.tclusa.com/support or


TAKE CARE WHEN REMOVING THE SOUNDBAR

TS5010_US_EN_QSG_V2.0


Copyright © 2019 TCL.

Bluetooth DOLBY AUDIO


4a Activate the remote control

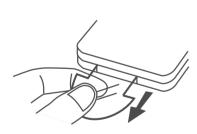


4b Replace the remote control battery

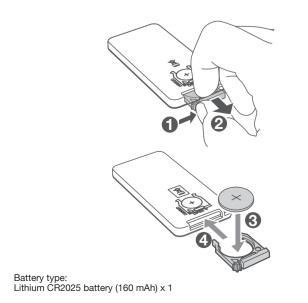


5a. Connect

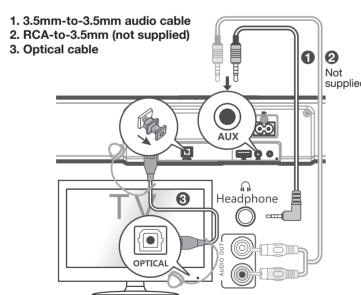

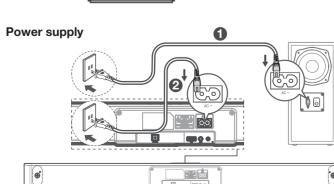


5b. Connect

IR pass-through cable

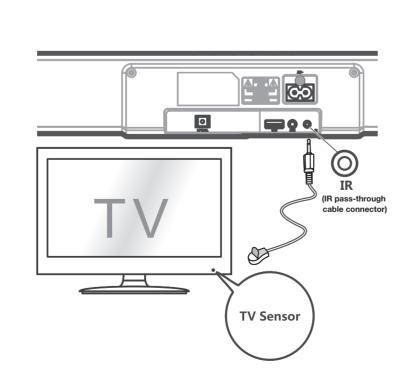


6. Pairing

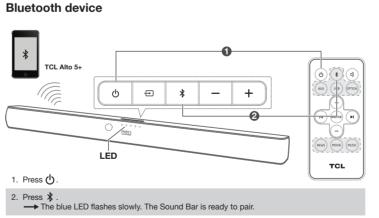

3. Power on your Bluetooth device and activate its Bluetooth function

→ You hear distinct double beep sounds.
→ The blue LED remains on solidly when pairing is successful

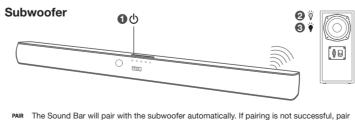

your Sound Bar with the subwoofer manually. Press and hold to activate pairing with the Sound Bar main unit.

IED • flashes slowly when the subwoofer is in idle mode.
 flashes quickly when pairing is in progress.
 remains on solidly when pairing is successful.

7a. Use

LED behaviors under different source mode

Sound Bar status	LED indicators
in standby mode	The red LED is on solidly.
in AUX mode	The green LED is on solidly.
in Bluetooth mode	The blue LED is on solidly.
ready to pair	The blue LED flashes slowly.
pairing in progress	The blue LED flashes quickly.
in optical mode	The orange LED is on solidly.
in USB mode	The white LED is on solidly.


7b. Use

Remote sound functions

Operation	LED indicators
+/-	The white LED flashes quickly and goes back to the source LED.
<	The red LED keeps flashing.
۵	The red LED flashes and goes back to the source LED.
MOVIE	The white LED flashes once.
MUSIC	The green LED flashes once.
NEWS	The orange LED flashes once.

7c. Use

Use the USB device for music playback

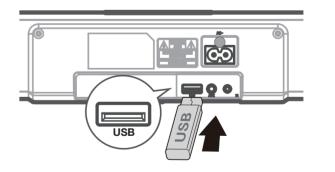

Operation	LED indicators
Listen to music.	The white LED is on.
Press ►IMPAIR to pause the music.	The white LED is on solidly.
Press ⋈ or ⋈ to skip to the previous/next track	The white LED is on solidly.