



Battery type: 1.5V AAA battery x 2

# 2b. Overview

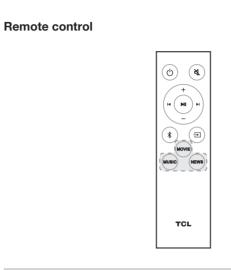

- Oress to turn the Sound Bar on or to standby mode.
- X Press to mute or unmute the sound
- +/- Press to increase or decrease the volume level.
- ▶I Play/pause/resume playback in Bluetooth/USB mode. Press and hold for 3 seconds to disconnect the Bluetooth function.
- I◄/►I Press to skip to previous or next track in Bluetooth/USB mode.
- Press to switch the audio source to Bluetooth mode.
- NEWS MOVE/ MUSIC Press to select the equalizer (EQ) effect when you are watching **news** or **movies** or listening to **music**.
- Press to switch the audio source among HDMI/USB/AUX/Bluetooth/ Optical modes. ÷

### 3. Wall mount

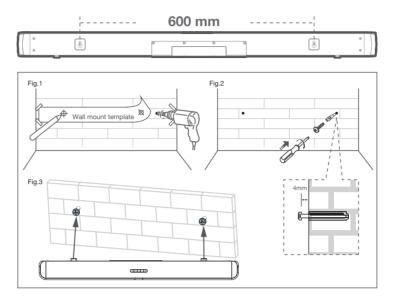


- Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 5cm below the center of the TV.
- 2. Use a level to make sure the Sound Bar is positioned accurately.
- 3. Use the tape to stick the wall mount template firmly on the wall.
- 4. Mark on the wall using each marking on the template through the mounting holes (Fig.1).
- 5. Take away the wall mount template.
- 6. Drill a screw hole at each marking on the wall.
- 7. Insert the supplied wall anchors into 2 screw holes on the wall (Fig. 1).
- 8. Insert the supplied screws into the wall anchors. Leave 4mm between the screw heads and the
- wall (Fig. 2).
- 9. Fix and tighten the screws on the wall (Fig. 3). 10. Hang the Sound Bar main unit on the screws (Fig. 3).

#### Copyright © 2019 TCL. All rights reserved. TS7000\_AU\_EN\_QSG\_V2.0

# 

# 6. Pairing

# Bluetooth device

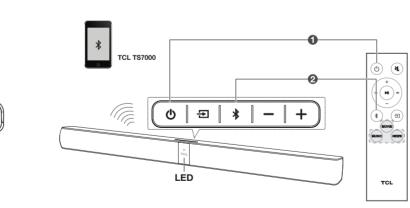


### 7a. Use

#### LED behaviors under different source mode

Sound Bar status	LED indicators
in standby mode	The red LED is on solidly.
in HDMI ARC mode	The purple LED is on solidly.
in AUX mode	The green LED is on solidly.
in Bluetooth mode	The blue LED is on solidly.
ready to pair	The blue LED flashes slowly.
pairing in progress	The blue LED flashes slowly.
in optical mode	The yellow LED is on solidly.
in USB mode	The white LED is on solidly.

# 7c. Use

#### Use the USB device for music playback

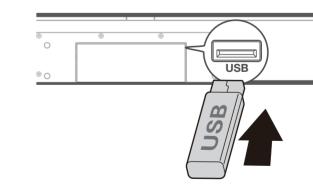

1. Press ( <sup>1</sup> ).	
----------------------------	--

- 2. Press  $\clubsuit$  .  $\longrightarrow$  The blue LED flashes slowly. The Sound Bar is ready to pair.
- 3. Power on your Bluetooth device and activate its Bluetooth function.
- Select TCL TS7000. → You hear distinct double beep sounds. → The blue LED remains on solidly when pairing is successful.

# 7b. Use

#### Remote sound functions

- Operation LED indicators
- +/- The white LED flashes quickly and goes back to the source LED.
- The red LED keeps flashing.
- $\triangleleft$  The red LED flashes and goes back to the source LED.
- MOVIE The white LED flashes once.
- MUSIC The green LED flashes once.
- NEWS The yellow LED flashes once.

LED indicators Operation Listen to music. The white LED is on. Press MI to pause the music. The white LED keeps flashing. Press I4 or I4 to skip to the previous/next track The white LED flashes quickly and goes back to the source LED.

#### For further support:

Australia: visit www.tclelectronics.com.au or call TCL Customer Service on 1300 738 149 New Zealand: visit www.tclelectronics.co.nz or call TCL Customer Service on 0800 449 750

**DOLBY** AUDIO"