TCL

DIGITAL SIGNAGE

Product Manual

TEN (TE43N, TE50N、TE55N, TE65N, TE75N)

Dear customers, as this device is multi-functional, you should read the Product Manual carefully before use, in order to fully and effectively enable all functions of this device.The functions of the product in kind shall prevail. Functional differences due to product upgrades are subject to no prior notice.

CONTENTS

SAFETY WARNINGS 2

DEVICE STABILITY 4

SAFETY SIGNS 5

CAUTION 6

ENVIRONMENTAL PRECAUTIONS AND INSTRUCTIONS..... 7

ACCESSORIES..... 8

FUNCTIONS AND FEATURES 9

WALL MOUNTING 10

WALL MOUNTING SPECIFICATIONS..... 11

REMOTE CONTROL KEYS AND INSTRUCTIONS..... 12

CONNECTION 14

DEVICE APPEARANCE..... 16

BASIC FUNCTIONS OF DEVICE 17

MULTIMEDIA, NETWORK DOWNLOAD FUNCTION QUESTIONS AND ANSWERS 18

FAULT ANALYSIS AND TROUBLESHOOTING HDMI 19

DISCLAIMER..... 20

TECHNICAL SPECIFICATIONS OF THE COMPLETE DEVICE 22

IMPORTANT INFORMATION 23

SAFETY WARNINGS

⚠ Please read and understand the following precautions carefully before using this product, and keep the Manual properly for future inquiry.

The device shall be kept in a well-ventilated environment.

- No vent holes shall be covered with items such as newspapers, tablecloths and curtains that may impede ventilation.
- Do not place exposed flame sources, such as lit candles, on the device.

The device shall not be exposed to drops or splashes, and no liquid filled objects such as vases shall be placed on the device.
To prevent tipping hazards, make sure that all edges of the device within the bracket, and do not place the device on any unstable or non-weight bearing carts, racks or tables.
The device must be securely secured to the wall by professionals.

⧈ Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
Equipment without this symbol is a Class I electrical appliance. It shall be connected to a mains socket outlet with a protective earthing connection.
Devices that need to be connected to the communication network and those that need to be connected to the wired network in the multimedia system must meet the requirements for isolation from the communication network and the wired network. The power plug or appliance coupler serves as the disconnecting device of the device and shall remain readily accessible.
Terminals marked with ϟ are live and dangerous, and shall be connected to external wires by trained personnel or to ready-made leads or cords. After the device is moved from a low temperature area to a warm area, the temperature difference may cause water beads in the device. The device shall be powered on only after water beads there in are fully evaporated and disappeared. Batteries (packs or assembled batteries) shall be kept from sunlight, fire, or similar overheating environment. Waste batteries should be recycled by the local recycling method for environment protection.
The symbol ⚠ϟ⊟ᴺ indicates the use of fuses on the neutral line of single-phase equipment that is permanently connected or equipped with non reversible plugs. After the fuse is activated, components that are still live in the equipment may pose a danger during maintenance.

SAFETY WARNINGS

Attention

If the battery is not replaced properly, there is a risk of explosion and can only be replaced with batteries of the same or equivalent type.

Warning

To prevent injury, the device must be securely fixed to the wall according to the installation instructions.

The wired network antenna connected to this device must be isolated from the protective grounding, otherwise it may cause fire and other hazards!

DEVICE STABILITY

The device may tip over, causing serious personal injury or death.

Never put the device in an unstable position. The device may tip over, causing serious personal injury or death.

Many injuries, particularly to children, can be avoided by taking simple preventive measures such as the following:

- Use cabinets or supports recommended by the device manufacturer.
- Only furniture that can safely support the device can be used.
- Ensure that the device does not protrude over the edge of the supporting furniture.
- Do not place the device on high furniture (such as cabinets or bookshelves) without securing both the furniture and the device to appropriate supports.
- Do not place the device on fabrics or other materials laid between the device and furniture.
- Educate children about the danger of climbing on furniture to reach for the device or its controls.

If an existing device needs to be retained and relocated, the aforementioned precautions should also be taken into consideration.

SAFETY SIGNS

⚠ Attention should be paid to the following safety signs on the device:




It is only suitable for safe use in areas below an altitude of 5000m.



It is only suitable for safe use in non tropical climate conditions.


CAUTION

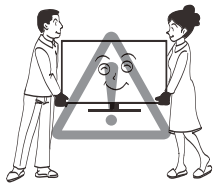


When moving the device, make sure the plug is removed from the power socket and disconnect the audio/video cables and all fixed cables. At least two people are needed for moving the device. The device can be moved upright only.




Do not touch the power cord or other connected wires and cables in case of thunder or lightning strikes.

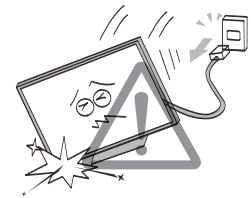

Turn off the device immediately and remove the power plug from the socket if the device falls off or the casing is damaged. Contact the service technicians for inspection and maintenance.

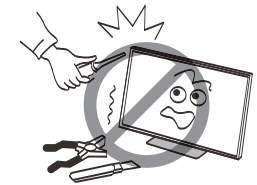


Do not repair, modify or dis assemble the device without permission.
In case of any faults, contact the service technicians for inspection and maintenance.

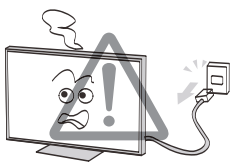

Turn off the device immediately and remove the power plug from the socket when the device breaks down or gives off smoke or a peculiar smell. Contact the service technicians after confirming that the smoke and smell have disappeared.



Unplug the power cord before cleaning the device. The device cannot be cleaned by gasoline, thinner or solvents that may deform the casing or damage the finish. There may be stains when rubber or vinyl products come into contact with the device for a long time.If the casing becomes dirty, wipe it with a soft dry cloth. When cleaning the LCD, gently wipe the LCD surface with the soft dry cloth.
Note: Do not wipe the display and casing with a wet cloth.

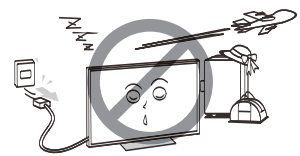

When the device is not in use for a long period of time (e.g., on vacation or travel), unplug the power cord from the power socket. The device is not fully disconnected from the power supply even when in standby mode, and will still draw a small amount of current.



Do not stand on or climb on the device.

ENVIRONMENTAL PRECAUTIONS AND INSTRUCTIONS

Everyone has the responsibility and obligation to protect the environment. You should pay attention to the following when using the product.

Energy saving: Energy saving is not only essential for environment protection, but also can reduce cost of electricity.


When the device is not in use, turn off the power switch (cut off the power) to save energy.

The device also consumes electric energy in standby state. If it is not in use for a long time, turn off the power switch as much as possible, and do not leave the device in standby state for a long time.

Power consumption during use can be reduced by reducing the luminance of the display. It is advised to select the operating mode as required. For devices with a backlight luminance adjustment function, the power consumption of the display can be reduced by reducing the backlight luminance of the display.

ACCESSORIES


Check whether the following accessories can be found in the packing box, if not, contact your local dealer.

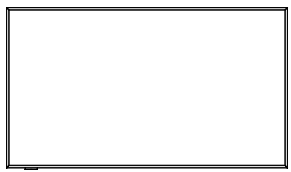


Monitor Unit



Remote Control




Batteries

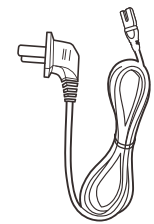

Power Cord



Product Manual



Warranty Card

- ☐ Monitor Unit x1
- ☐ Remote Control x1
- ☐ Batteries x2
- ☐ Power Cord x1
- ☐ Product Manual x1
- ☐ Warranty Card x1

Note: The accessories in kind shall prevail and are subject to change without notice.

FUNCTIONS AND FEATURES

Functions


- Commercial-grade quality standard, 18/7 continuous operation, a wide range of applications;
- True standby technology and built-in RTC clock module facilitate ultra-low power consumption and scheduled power on/off functions to promote energy conservation and environmental sustainability. Anti-burn-in screen settings significantly enhance the screen's durability and lifespan;
- Wired network and Wi-Fi (including enterprise Wi-Fi) connections, along with domain name user authentication login, ensure efficient wireless cooperation;
- Multiple interfaces: 2-channel USB, 2-channel HDMI 2.0 IN, 1-channel Audio OUT (3.5mm), 1-channel RS232 IN, 1-channel RJ45;
- High hardware configuration, 16GB storage, ultra-large memory, smooth operation without jamming, support RS232 interface, convenient for users to realize centralized control function;
- Multiple mainstream media formats:
  Picture decoding: JPG, JPEG, BMP and PNG
  Audio decoding: MP2/MP3/WAV/OGG/FLAC/Ape/AAC/M4A/AIF/AIFF/ALAW/alac/WMA
  Video decoding: DAT, MPG, TS, MPEG, M2V, TP, VOB, AVI, MP4, MOV, 3GP, AVI, OGM, 3G2, MKV, M2TS, MTS, M4V, FLV, F4V, PMP, ASF, RM, RMVB, H.264, AVS

Features


- 3-Side Bezel-less design, and stylish appearance that complements any retail environment;
- Ultra-HD 4K (3840 x 2160) resolution, commercial AG 2% haze screen, NTSC 72%, high color gamut, rich and delicate picture details, restoring real colors;
- High brightness 350-nit, clearer and brighter picture than TV, more suitable for commercial scenarios than traditional TV;
- TCL EShow 3.0 & Partner CMS integration ensures immersive experience;
- Support import of videos, audio, and pictures via USB drive, local stand-alone playback, and automatic playback upon startup;
- Open API interface ensures compatibility with customer software and customer applications can be automatically activated upon startup.

Note: The performance of this product is continuously being improved. All product specifications (including appearance and color) are subject to the actual product and may be updated without prior notice.


WALL MOUNTING

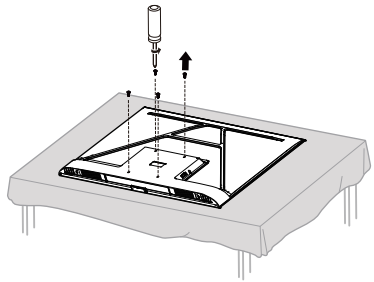


1. Remove the screws from the mounting holes of the rear cover mount.
   Note: Some models may come with two screws, four screws, or no screws at all.

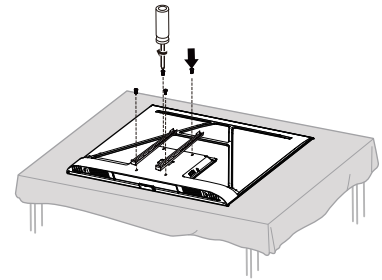

2. Use VESA screws to lock the mount to the complete device (top VESA holes).

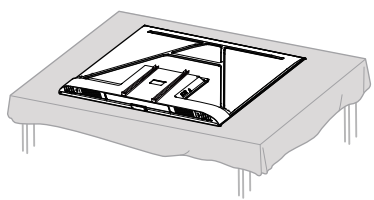


3. The mount installation is completed.




4. Hang the device on the wall according to the mount instructions.

Notes: 1. The steps are for illustration only, and the product appearance shall be subject to the physical object; 2. The complete device does not include a mount as a standard accessory. If needed, please purchase it separately and refer to the corresponding mount instructions for proper setup.

WALL MOUNTING SPECIFICATIONS

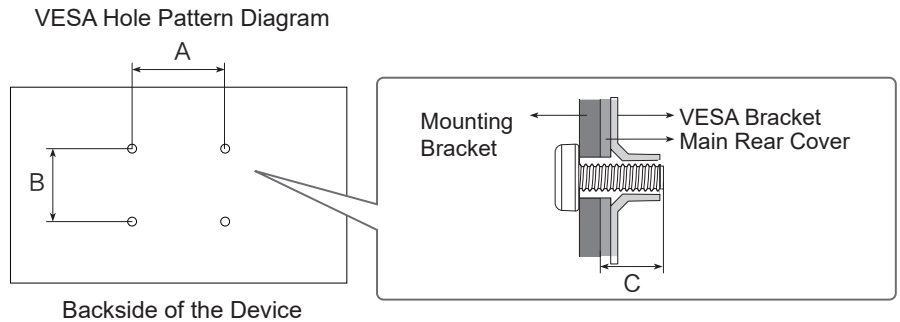




Model Name	VESA screw hole specs (A * B) in millimeters	C(mm)	Standard Screw	Quantity
TE43N	200 x 200	12	M6	4
TE50N	200 x 200			
TE55N	200 x 200			
TE65N	200 x 200			
TE75N	300 x 300			


REMOTE CONTROL KEYS AND INSTRUCTIONS

Schematic Diagram of Remote Control

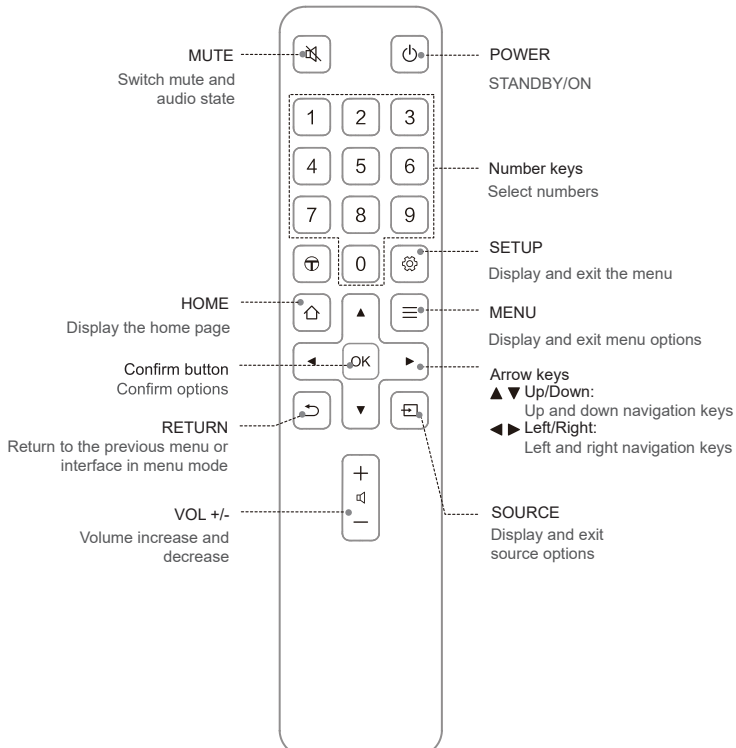


Note: For reference only, which may vary for different models.


Installation Diagram of Remote Control Batteries



1. Push aside the battery compartment cover;



2. Place two AAA batteries accordingly to the polarity marked in the battery compartment;



3. Push to close the battery compartment cover.

REMOTE CONTROL KEYS AND INSTRUCTIONS

Precautions for use of remote control:


- When operating the main unit with the remote control, aim at the screen's reception area. If the remote control is unresponsive, you can pull down the key box and direct the box for remote operation. If there is an obstacle between the main unit and the remote control, it may result in malfunction.
- To ensure optimal performance of the remote control, please replace the battery immediately if abnormal operation is found after long-time use of the battery.
- Do not mix new and old batteries or batteries of different types.
- When the battery power is low, it may leak electrolytes, which can damage the remote control. Please replace the battery immediately once it is found that the power is low or the remote control does not work.
- If the remote control is not used for a long time, please take out the battery to prevent electrolyte leakage from the battery.
- When the remote control is not in use, please store it in a cool and dry place. Avoid direct sunlight, exposure to heat, and storing it in damp areas.
- The system can activate the remote control lock, which will prevent infrared remote control from operating the device. To unlock, please try the following operations:


  1. Press the "1003" button followed by the "OK" button. After seeing the prompt to unlock the remote control, attempt to operate it.

  2. Press the "Up/Down/Left/Right" button followed by the "OK" button. After seeing the prompt to unlock the remote control, attempt to operate it.

CONNECTION

Device terminal interface

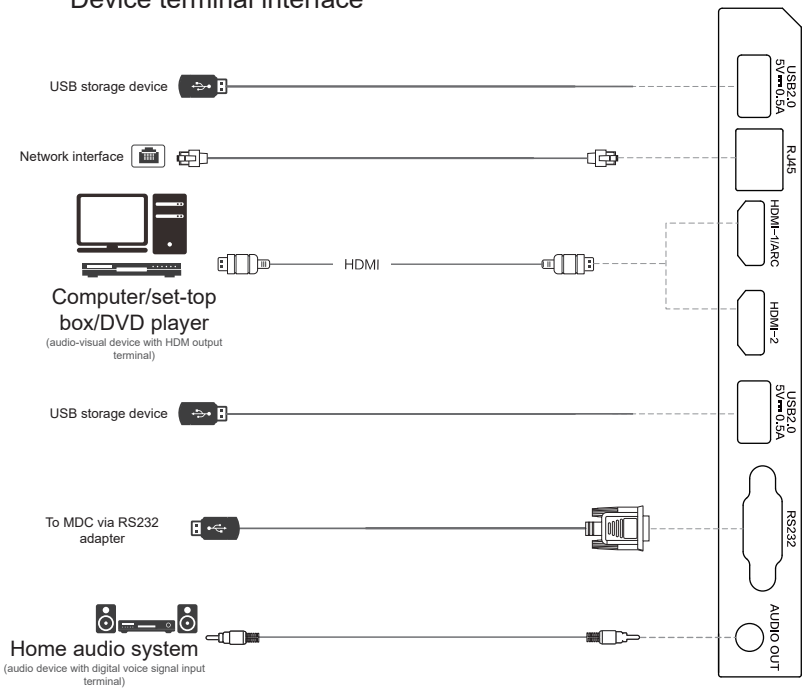

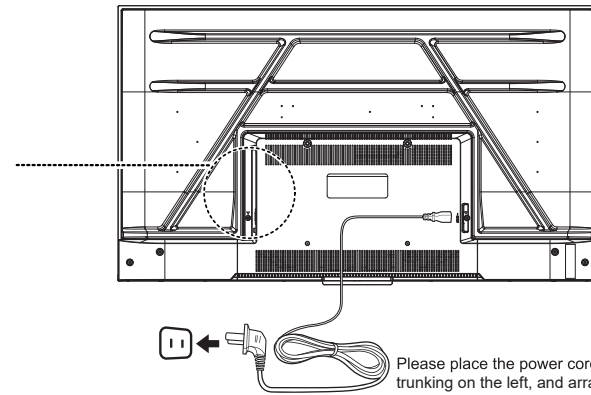


Please place the power cord in the first trunking on the left, and arrange other external device wires sequentially from right to left in the trunking.

Tips:


1. The HDMI port supports the HDMI2.1 standard, HDMI1/2 supports 4K@60Hz. However, there may be issues with external HDMI devices if their version is too low, which could result in malfunction.

CONNECTION

Schematic Diagram of Wired Network Connection

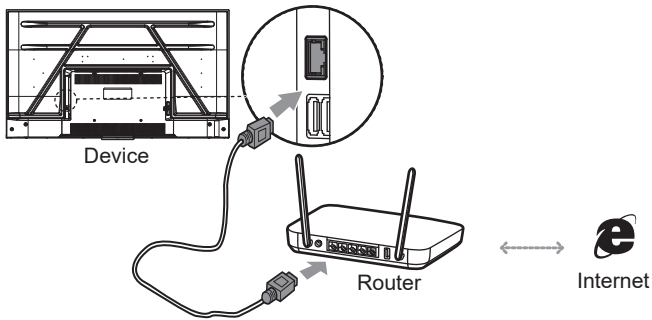

Schematic Diagram of Wireless Network Connection

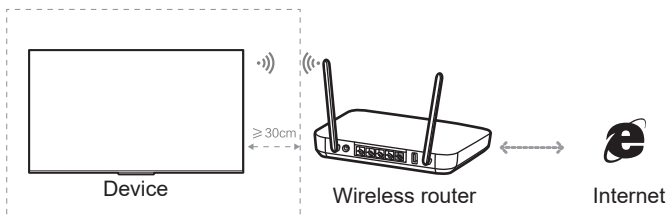

Tips:

When the device experiences intermittent blurred-screen display issues during use, it is recommended to reposition the router at a distance of approximately 30 cm from the device to determine if the issue resolves, thereby eliminating potential interference from the router.

Network connection and settings

This device offers two connection options for users to choose from.

- Wired network connection and settings


  If the user's network can dynamically obtain an IP address, select "Automatically Obtain IP Address" for network connection.

  If a static IP address needs to be input, select "Manually Set IP Address". After entering the manual IP address input interface, press the OK button to call out the soft keyboard, press the Up/Down/Left/Right button to select numbers, and then press the OK button to confirm the input. After entering each set of numbers, proceed to the next input field until all entries are complete. Press the "Return" button on the remote control to exit the soft keyboard, then select "Connect" to initiate the automatic network connection.


- Wireless network settings

  When utilizing Wi-Fi to connect to a wireless network, the network connection can be established by adjusting the settings within this menu. Select "Settings —> All Settings —> Network —> Wireless Network —> Wi-Fi Switch".

DEVICE APPEARANCE

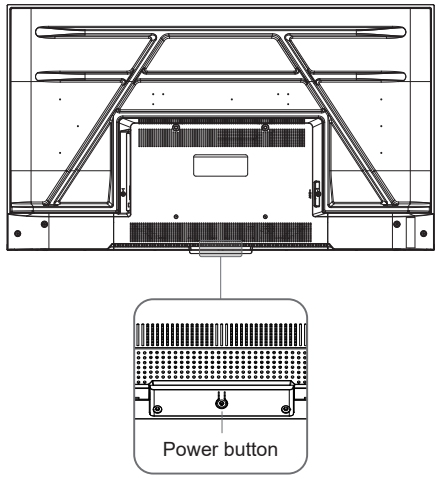

Turn on/off the device.

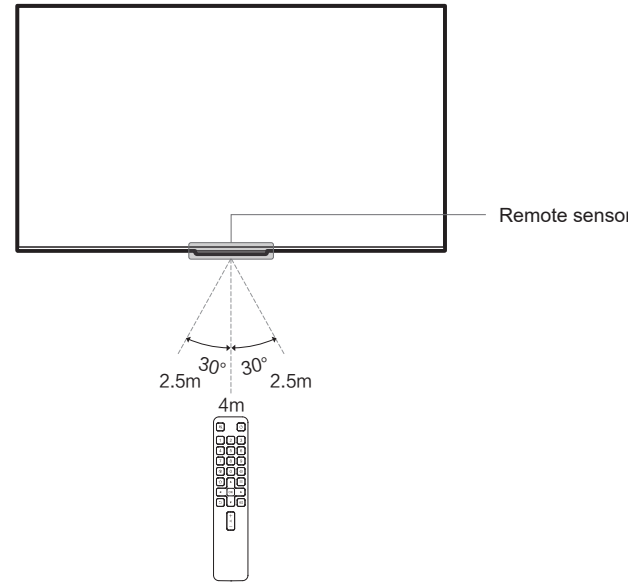

Remote sensor on the screen: Within a distance of 2.5 m to 4 m from the sensor on the product, operate the remote control at an angle of up to 30° to the left and right.

BASIC FUNCTIONS OF DEVICE

- Startup

  Connect the AC power supply, and the device will start up automatically. When the device is on standby, press the ⏻ button on the remote control or device to start up the device.

- Shutdown

  When the device is turned on, short press the ⏻ button on the remote control to enter the standby state; short press the Standby button on the device to enter the standby state.

  Note: In case of power failure or out-of-service for a long time, please unplug the power cord from the socket in time.

- Function entry

  Enter the home page of the device, and press the Left/Right button on the remote control to select different function entries. When the focus of the remote control moves to these function entries, relevant applications will be displayed on the interface.

MULTIMEDIA, NETWORK DOWNLOAD FUNCTION QUESTIONS AND ANSWERS

1. What should I pay attention to in software upgrade?

A: (1) Do not power off during the upgrade process; (2) Do not use the remote control for any operation during the upgrade process; (3) The upgrade process may take a long time (generally about 5 minutes), but the process of downloading the upgrade APK through the network is affected by the network, so it cannot be accurately estimated, so you need to wait patient-ly.

2. Why is there no obvious change after the software upgrade?

A: Sometimes the software upgrade is to add new functions, and sometimes it is to improve the performance of the device. Therefore, the content of each upgrade is different. After the upgrade, new functions may be added and there are obvious changes in the interface. Or there may be no changes in the interface and no added functions, but only improved performance.

3. What if I accidentally touch the power supply during the upgrade process and terminate the upgrade?

A: Specific treatment methods: if there is a USB disk inserted in the device, please do not remove it, with the USB disk restart, should be able to upgrade; If you didn't start the upgrade with the USB disk, you also need to turn off the device and restart it to see whether it is normal; If you still can't upgrade again, please contact the customer service center.

4. Why does the USB device is not detected when the USB drive is plugged in?

A: It may be because the mobile hard disk is faulty or the power supply is insufficient. If it is a mobile hard disk fault, the mobile hard disk needs to access to the computer, then repair the mobile hard disk. Specific steps: first, find the disk on the computer, right-click the mobile hard disk, select "properties" in the pop-up box, and then select "tools". After that, begin to repair the selected mobile hard disk or USB disk. Secondly, if the mobile hard disk power supply is insufficient (the mobile hard disk will have, "click" sound), it will cause the hard disk cannot work normally. A voltage of 5V and current of 500MA-700MA are required to operate USB devices. If the power supply is insufficient, it will cause to read/write errors or even unrecognizable on the mobile hard drive. The device will work fine with USB in this range. If a power shortage occurs, plug both plugs from one end of the USB cable into the USB portal the same time to enhance the power supply. In addition, you can also use an external power supply (please pay attention to choose a suitable model). Please note that you must start the machine before inserting the USB disk.

FAULT ANALYSIS AND TROUBLESHOOTING HDMI

HDMI Failure

1. Check whether the connection cable from the device to the device is plugged in place or re-plug the HDMI cable
2. Check whether the resolution of the external device meets the requirements of the device.

No Picture No Sound

The power outlet switch is not turned on.

Poor connect of power line.

Check the signal source.

The Image Has Messy Ripples

Usually cause by local interference. Such as cars, fluorescent lamps, hair dryers, etc.

No Color

A black screen in computer mode (that is, when it is used as a computer monitor) may be due to the unrecognizable resolution set by the computer. It is recommended to change to the optimal resolution or other Windows system standard resolutions.

Normal Picture, No Sound

Maybe the volume is not turned on, press the volume + key: if there is no physical volume key, adjust the volume in the system settings.

With Sound But No Picture

Adjust the brightness analog amount.

Spark Interference

Black dots, horizontal stripes or images appear to sway and flap. These phenomena are often cause by the ignition system, neon lights, the interference of electric drill or other electronic device.

DISCLAIMER

I. Please keep the Warranty Bill properly. This Warranty Bill and the purchase invoice together serve as the warranty certificate for free maintenance service within the warranty period.

II. Valid certificate of warranty:

1. In case of product failure within the warranty period, consumers shall enjoy free maintenance service by the purchase invoice and the Warranty Bill. To enjoy the free maintenance service, the serial number of the product to be repaired must be consistent with that of the product on the Warranty Bill.

In absence of a purchase invoice, the date of manufacture indicated by the serial number is postponed by 30 days as the start of the warranty period. Without the purchase invoice and the Warranty Bill, consumers cannot enjoy free maintenance service but are charged for service.

2. Installation and debugging records cannot serve as the warranty certificate alone, but must be accompanied by valid invoices.

III. To the maximum extent permitted by law, this warranty does not cover, and a warranty claim cannot be made in respect of, any loss, damage, failure or defect relating to or arising from any one or more of the following:

1.Improper set up, installation or positioning of the product, or improper adjustment of settings or controls associated with the product;

2.Normal wear and tear of the product;

3.The product not being used or maintained in accordance with the manufacturer’s instructions, specifications or recommendations;

4.Dismantling, repairing, servicing or other work carried out on or in relation to the product by any person other than an authorized repairer or authorized service provider;

5.Use of defective or incompatible parts or accessories in relation to the product;

6.Accident, theft, vandalism, misuse, abuse, negligence, collision with another object, operation of a computer virus, fire, flood, liquid spillage or ingression, earthquake, thunderstorm activity, acts of God or any other event or circumstance occurring in relation to the product which is beyond the reasonable control of TCL;

7.Defective pixels in the product where the visible number of those defective pixels in less than or equal to the acceptable number of defective pixels state in the manufacturer's specifications (or where there are no such specifications relating to defective pixels for the product, there are less than 12 defective pixels), it being acknowledged that a normal limitation of the technology for LCD and plasma panels (and the associated manufacturing processes) is for the screen to exhibit some bright dark or partially lit pixels;

8.Exposure of the product to excessive heat or moisture or other environmental conditions, including dust, rodents, insect, rust, corrosion, salt build-up or inadequate ventilation;

DISCLAIMER

9.Viewing of an image or images on the display screen of the product for an extended period of time, ii being acknowledged that permanent damage can occur to a product if still or repetitive images are left or used on the screen for an extended period of time;

10.Electrical issues, including power surges, spikes or dips, or incorrect or fluctuations in voltage or current;

11.Externally or other interference resulting from or caused by or to other products and/or sources;

12.Incompatibility with or configuration of equipment connected to the product;

13. Inability of the product to read or output damaged or copied media;

14. Any error or failure in software applications, content and/or service provided by a person or entity (other than TCL) which are accessed through the product;

15. Use of any other equipment, systems, utilities, services, applications, parts or other items not supplied or authorized by TCL;

16. Cosmetic, structural or mounting items associated with the product, including brackets, wall mounts, shelves or doors; and

17. Consumable (for example, bulbs, globes, batteries and cables) or lost parts or accessories associated with the product.

IV. Without limiting the other provisions of this warranty and to the maximum extent permitted by law, this warranty will not apply, and TCL will not be liable under any warranty claim, in relation to the product if any one or more of the following apply:

1.The product was not purchased by you as a brand-new item from TCL or a retailer who at the time of purchase was authorized by TCL to sell the product to you;

2.The serial number on the product has been damaged, modified or removed;

3.Any internal hardware or software associated with the product has been accessed or tampered without TCL's prior authority; or

4.You breach any provision of this warranty.

V. Products beyond the warranty period or the scope of responsibility of warranty will be charged for corresponding services in accordance with the prescribed charge standard.

TECHNICAL SPECIFICATIONS OF THE COMPLETE DEVICE

Model	Audio output power	Rated Power	Visual image diagonal size	Dimensions (mmxmmxmm)	Weight (kg)
TE43N	10W+10W(±15%)	95W	43 inches	About 957×558×70	About 5.5
TE50N	10W+10W(±15%)	95W	50 inches	About 1111×644×70	About 7.6
TE55N	10W+10W(±15%)	95W	55 inches	About 1226×711×70	About 9
TE65N	10W+10W(±15%)	135W	65 inches	About 1446×833×70	About 12.5
TE75N	10W+10W(±15%)	220W	75 inches	About 1667×959×72	About 18.4

- Supply voltage range: 100-240V ~ 50/60Hz(subject to the warning sign on the back)
- Operating environment :

  Operating temperature: 0℃ - 45℃ Operating humidity: 20%RH-80%RH

  Storage temperature: -20℃ - 60℃ Storage humidity: 10%RH-90%RH

- Altitude: ≤5000m (if the device is marked with an applicable altitude range, the specifications indicated on the device shall take precedence)
- Status display mode: screen display
- Adjustment status indicator : screen window menu
- Network interface : RJ45/10/100m. BASE
- USB 2.0: 5.0V ⎓ 500mA
- USB 3.0: 5.0V ⎓ 1A(limited to models with USB 3.0)

IMPORTANT INFORMATION

Radio Information

- Bluetooth® transmitter frequency range: 2402 – 2480MHz
- Bluetooth® transmitter power: 6dBm (+/-2dB)
- 2.4G Wi-Fi transmitter frequency range: 2400 – 2483.5MHz
- 2.4G Wi-Fi transmitter power: 15dBm (+/-2dB) at 54Mbps
- 5G Wi-Fi transmitter frequency range:
  - Band 1: 5150 – 5250MHz
  - Band 2: 5250 – 5350MHz
  - Band 3: 5470 – 5725MHz
  - Band 4: 5725 – 5825MHz
- 5G Wi-Fi transmitter power: 14dBm (+/-2dB) at MCS7
- DVB-T/T2/C tuner frequency range: 50.5 – 858MHz
- DVB-S/S2 tuner frequency range: 950 – 2150MHz
- Operation of 5150 – 5350MHz is restricted to indoor use only.



BE	BG	CZ	DK	DE	EE	IE
EL	ES	FR	HR	IT	CY	LV
LT	LU	HU	MT	NL	AT	PL
PT	RO	SI	SK	FI	SE	UK (NI)

Declaration of Conformity

CE

Hereby, TCL declares that the radio equipment type DIGITAL SIGNAGE is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.tcl.com. Choose the model name and go to DOWNLOADS.

Hereby, TCL declares that the radio equipment type DIGITAL SIGNAGE is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.iffalcon.com. Choose the model name and go to DOWNLOADS.

UK CA

Applies to products intended for the UK market.

Hereby, TCL declares that the radio equipment type DIGITAL SIGNAGE is in compliance with the relevant UK statutory requirements. The full text of the UK declaration of conformity is available at the following internet address: www.tcl.com. Choose the model name and go to DOWNLOADS.

UK Importer: TCL Electronics UK Limited,
1 Brunel Way, Slough,
United Kingdom, SL1 1FQ

Energy star compliance



As an ENERGY STAR Partner,TCL Commercial Information Technology(Huizhou) has followed the EPAS enhanced product qualification and certification process to ensure that the Products marked with the ENERGY STAR logo are ENERGY STAR qualified per the applicable ENERGY STAR guidelines for energy efficiency. The logo appear within the display settings dialog window on all ENERGY STAR qualified Signage Display.

The ENERGY STAR program for Signage Display was created by EPA to promote energy efficiency and reduce air pollution through more energy-eficient equipment in retail or department stores, restaurants, museums, hotels, outdoor venues, airports, conference rooms or classrooms.One way that a product can achieve this goal is by using a power management feature to reduce power consumption when the product is not in use.

For TE75N, TE65N, TE55N, TE50N, TE43N, By default, the panel will also go in to sleep mode without user action after 60 minutes of inactivity.

In the event that brightness settings or power mode settings are changed by the user, energy consumption of the panel may increase beyond the limits required for ENERGY STAR certifcation.

Additional information on the ENERGY STAR program and its environment benefits are available on the EPA ENERGY STAR website at http://www.energystar.gov

ESD regulation

This apparatus meets ESD performance criteria. In case the apparatus does not recover in Ethernet connection mode or USB playing mode due to electrostatic discharge, user intervention is required.

Statement of Compliance:

2023 No. 1007 The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023

The product is in compliance with the following standard(s) or normative document(s):

ETSI EN 303 645 V2.1.1:2020-06

Provision 5.1-1

Provision 5.1-2

Provision 5.2-1

Provision 5.3-13

The full text of the UK declaration of conformity is available at the following internet address: www.tcl.com.

Choose the model name and go to DOWNLOADS.

Manufacturer: TCL Operations Polska Sp. z o.o.

ul. A. Mickiewicza 31/41

96-300 Żyrardów, Poland

Email address: zyeee@tcl.com

TCL KING ELECTRICAL APPLIANCES (HUIZHOU) CO., LTD

ZHONGKAI NEW HIGH-TECH INDUSTRIES,DEVELOPMENT ZONE SECTION 78,
HUIZHOU,GUANGDONG,CHINA